


### Sailboat & Trawler Mast Mount Instructions



1. Refer to the antenna manufacturer’s recommended instructions for information on the proper placement and mounting of the dome. Carefully follow instructions concerning cable routing.

2. Install top plate with provided hardware to arms to accommodate the dome, wiring, and mast curvature . Use 4 nylon washers between top plate and arms.

3. Hold mast mount with installed feet at desired location on mast. Mark location of two top holes in feet (one on each foot) on mast. **Note:** Feet can be rotated or reversed to better match mast section.

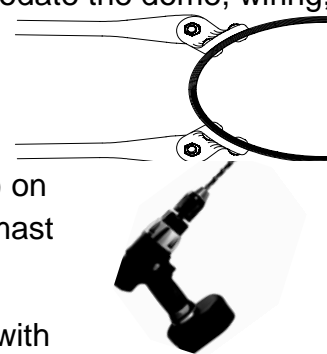

4. Drill the holes using a 3/16” (#7) drill bit and install bracket with supplied rivets. Drill top hole on each side and rivet in place to hold bracket steady. Drill holes and attach remaining rivets.

5. Tighten all bolts holding top plate to arms, and arms to feet. To make fastening easier, add a small amount of white grease to the bolts.

6. Install antenna to top plate with bolts provided by antenna manufacturer.

Parts included:		Tools required:
2-Cast Aluminum Feet	4-6mm Nyloc Nuts	Drill with 3/16 (#7) bit
2-Aluminum Arms	4-8mmx25 SS Flat Head Screws	Phillips Screwdriver
1-Aluminum top plate	4-8mm SS Flat Washers	Pop Rivet Gun
4-6mmx40 SS Hex Cap Screws	4-8mm Nyloc Nuts	Adjustable Wrench
4-6mm SS Flat Washers	12-Aluminum Rivets with Mandrel	
4-Nylon Washers	12- 6mm Black Bushings for feet	